
Access the following options through the *Function Keys*. Within a given menu, press the [YES] key to confirm an entry or the [NO] key to move backward through the menu.

BASIC PROGRAMMING

Change Displayed Data: [MODE]>PAGE>LINE>CHANNEL>MODE>UNITS

Change Displayed Channel (if available): [CHAN]

Set Backlight: [PROG]>BACKLIGHT

Show Clock: [PROG]>CLK>SHOW

Show System Information: [PROG]>Sysinfo

ADVANCED PROGRAMMING

Set Up Alarms:

[PROG]>ALARMS>A/B>MODE>UNITS>TRIP TYPE>Setpoint/Deadband

Set Up Recorders: [PROG]>RECORDERS>

A/B>RANGE>MODE>UNITS>ZERO>Zero Value>SPAN>Span Value

Set Up RS232 Communications Port: [PROG]>PORT>BAUD/FORMAT

Set Up AutoCal Interval: [PROG]>AUTOCAL>Interval

Set Up Data Logger: [PROG]>LOGGER>STORAGE/SETUP

Enter System Constant:

[PROG]>SYSTEM>MODE>CONSTANT>Constant Value

Enter Saturation Constant:

[PROG]>USER>SAT-CONST>Data Point>Temperature>Constant

Activate Computer-Enhanced Response:

[PROG]>USER/ENHANCED/NO/YES

Set Up Error Processing:

[PROG]>SYSTEM>MODE>ERROR>Type>Response

TESTING

Test Alarms: [PROG]>TEST>ALARM>A/B>TRIP/RESET

Test or Trim Recorders:

[PROG]>TEST>RECORDER>A/B>RCD Range>SCALE/TRIM

Check/Recharge Battery:

[PROG]>TEST>BATTERY>STATUS>RDCHGTIME

SETUP

Configure Probes: [PROG]>SYSTEM>MODE>CONFIG>Sensor

Calibration Data: [PROG]>SYSTEM>MODE>CURVES

Reference Values for a Channel Card: [PROG]>SYSTEM>MODE>REF

PROGRAM MENU OPTIONS

