


iVIEW™ Remote PTZ

Conduct and Record Inspections Anywhere from Your PC

Imagine being able to control all the digital inspection functions of the CA-ZOOM® PTZ-6.0 system with a click of your mouse. Now imagine being able to do that from the other side of the world* while viewing real-time inspection images from your PC. iVIEW Remote software works with your CA-ZOOM PTZ-6.0 system, allowing you to connect the system to a PC up to 15.0 m (50.0 ft) away. Using commercially available PC remote control software (such as Lotus® SameTime®), you can then transmit live images over the Internet** and control the steering, perform measurements, and other functions from virtually anywhere.

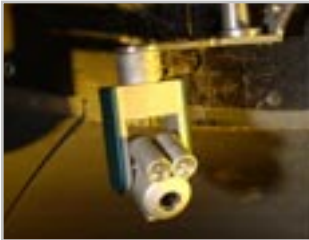

▼ Steam Generator Bowl Inspection



▼ Pharmaceutical Tank Weld Inspection



▼ Oil Refinery Vessel Inspection

iVIEW REMOTE KIT INCLUDES

- CA-ZOOM PTZ-6.0 iVIEW Remote software for Windows®
- 3.0 m (10.0 ft) RS-232 cable - system accepts up to 15.0 m (50.0 ft)
- 3.6 m (12.0 ft) S-Video cable
- S-Video to USB adapter
- RS-232 to USB adapter

Engineered with nuclear and other hazardous environments in mind, iVIEW Remote software offers a safe alternative to human entry into dangerous inspection areas. As another unique capability of the CA-ZOOM PTZ-6.0 system, remote operation means that you're in control – from wherever you happen to be inspecting.

Features and Benefits of the Product:


- Remote control of all the CA-ZOOM PTZ-6.0 system's digital and mechanical functions for added versatility, safety and convenience
- Capture or playback live video in either .avi or MPEG-4 formats and save onto your PC or other external storage media
- Capture snapshots in JPEG or BITMAP formats and save onto your PC or other storage media from either live video or playback



Powered by
iVIEW™

USB Video or Firewire†

RS-232 or USB

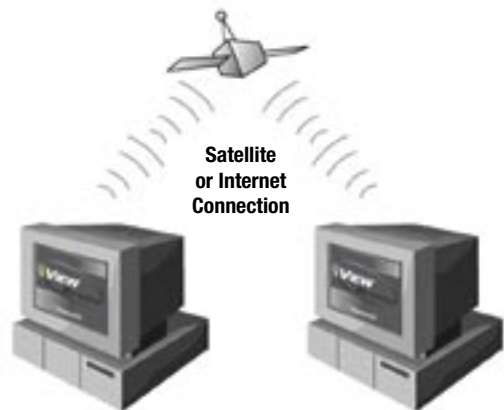

* System requirements include PC remote control software such as Lotus SameTime video conferencing

** System requirements include high-speed Internet access to support live video streaming

† Optional



CA-ZOOM® PTZ Series
High-power zoom (up to 300:1) with joystick-controlled color pan-tilt-zoom camera and color VGA display



VideoProbe® XL PRO™
Advanced portable, high-resolution, digital video borescopes with measurement



LongSteer® VideoProbe®
Up to 100 ft long, articulating, small-diameter video borescopes



ROVER®
Steerable robotic crawlers



Rigid Borescopes
Durable insertion tubes with superior image quality



Flexible Fiberscopes
High-resolution images. Available in many diameters



Services

- On-site inspection
- 24/7 availability
- Loose-parts retrieval
- Training programs
- Metallurgical and failure analysis

Equipment Rentals

- Same or next-day service anywhere in the world
- Program options and lease-to-own plans available
- 24/7 availability



ISO 9001
REGISTERED COMPANY

To schedule a product demonstration or to find out more, call us at 888-332-EVIT(3848) or 973-448-0077 or visit www.everestvit.com.



ABOUT EVEREST VIT

Everest VIT is the industry leader in the development, sales, rental, training and on-site service of Remote Visual Inspection (RVI) equipment. RVI provides viewing capabilities from a remote location, enabling companies around the world to inspect machinery, facilities and infrastructure in the safest, quickest and most cost-effective manner possible. Everest VIT's innovative products have been used to streamline the inspection process in all industries where safety, security and accuracy are of paramount concern, such as aviation, power generation, processing, manufacturing, law enforcement and infrastructure.

www.everestvit.com

Equipment Sales: 888-332-EVIT (3848) • Rentals & Inspection Services: 800-979-24X7 (2497)
Direct: 973-448-0077 • Fax: 973-448-0044 • Locations around the world

EVIT-2315-0504