


M Series

Panametrics Aluminum Oxide Moisture Probe

Applications

This Panametrics aluminum oxide moisture sensor probe measures moisture concentration in gases and non-aqueous liquids from trace to ambient levels. It is designed to be used in conjunction with all Panametrics moisture analyzers for industries including:

- Petrochemical
- Natural gas
- Industrial gas
- Semiconductor
- Furnace gas/heat treating
- Power generation
- Air dryer
- Pharmaceutical
- Aerospace

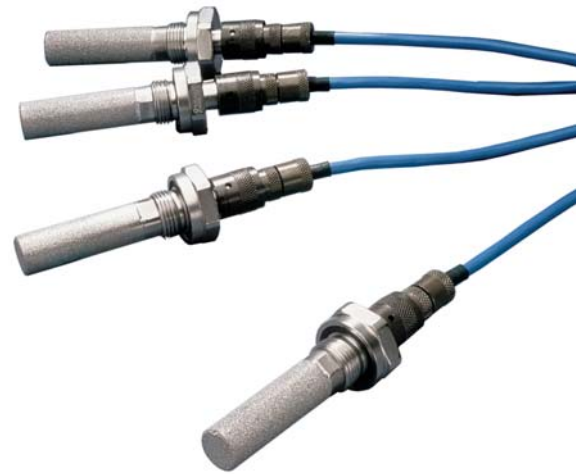

Features

- Intrinsically safe when used in conjunction with certified electronics or zener barriers
- Superior sensitivity, response speed and calibration stability
- Optional temperature sensor
- Calibrations traceable to National Institute of Standards and Technology (NIST) or National Physical Lab U.K. (NPL)
- Designed for in situ applications or in conjunction with sample conditioning systems
- True absolute humidity sensor
- Wide dynamic range



Panometrics Hygrometer Systems and Moisture Probes

Panometrics aluminum oxide moisture probes have set the standard of performance and value in industrial moisture measurement for more than 40 years.

In use, M Series moisture probes are coupled to Panometrics hygrometer consoles by an interconnecting cable. Ease of use, wide measurement range and rigorous calibration standards make these systems the preferred choice for industrial moisture measurement worldwide.

Superior Performance

Film thickness of the oxide layer is critical to the performance of this type of sensor. GE manufactures sensors with an oxide film thickness that causes them to exhibit true absolute humidity, rather than relative humidity response. This critical film thickness also gives the M Series probe quick response and exceptional calibration stability.

Rigorous Calibration Standards Traceable to NIST/NPL

Each Panometrics aluminum oxide sensor is individually calibrated in one of the world's most advanced moisture calibration facilities. Developed over several decades, this facility uses flow, temperature and pressure measuring devices, traceable to NIST/NPL, to generate precisely known moisture concentrations to which each probe is exposed during the calibration process.

All data is gathered and stored by a dedicated computer system. Calibrations are repeated over a period of months to determine the stability of each individual moisture probe. Only those probes that meet GE's demanding specifications for accuracy and stability are shipped to customers.

Theory of Operation in Gases and Liquids

The direct measurement of water vapor pressure is accomplished easily and effectively in both gases and liquids by the M Series aluminum oxide moisture sensor. The sensor consists of an aluminum strip that is anodized by a special process to provide a porous oxide layer over which a very thin coating of gold is evaporated. The aluminum base and the gold layer form the two electrodes of what is essentially an aluminum oxide capacitor.

Water vapor is rapidly transported through the gold layer and equilibrates on the pore walls of the oxide layer. The number of water molecules absorbed on the oxide structure determines the conductivity of the pore walls. Each value of pore wall resistance provides a distinct value of electrical impedance, which in turn is functionally related to the water vapor pressure. This functional relationship holds for measurements made in either gas phase or liquid phase.

Installation Flexibility

M Series probes are designed to be located at the process, exactly where the measurement is needed. Cable length between the probe and hygrometer may be 2000 ft (610 m) or more. Operating temperature range is -166°F to 158°F (-110°C to 70°C), pressure range is from vacuum up to 5000 psig (345 bar), and no minimum flow rate is required. Sample cells make M Series probes easy to install, and the cells are available in general purpose, Type 4 weatherproof, and Type 7 explosion-proof housings.

Remote installation of the probe and wide operating parameters allow for in situ placement of the probe. Because a sample need not be brought to the analyzer, both the time lag and the potential for sample contamination associated with sample delivery systems are eliminated. This feature is extremely important in the measurement of very low moisture content or where rapid changes occur.

When the integrity of the measurement is threatened by conductive or erosive particles, or adverse process conditions, sample conditioning will be required. GE manufactures turnkey sample-conditioning systems that maintain the integrity of the sample's moisture content while removing the contaminants. These designs have been field-tested and have proven to be reliable, while requiring little or no maintenance.

M Series Specifications

Moisture Probe

Intrinsic Safety

Intrinsically safe when connected to a Panametrics Moisture Series analyzer, PM880 portable hygrometer or intrinsically safe barriers in accordance with the user's manual.

M Series moisture probe:

BAS01ATEX1096X

Ⓢ II 1 G EEx ia IIC T4 (-20°C to +80°C), and CSA C US Class I, Division 1, Groups A,B,C&D T4, LR44204-23

European Compliance

Complies with EMC Directive 89/336/EEC and PED 97/23/EC for DN<25

Type

Aluminum oxide moisture sensor

Calibration

Each probe is individually computer calibrated against known moisture concentrations, traceable to NIST or NPL.

Dew/Frost Point Calibration Ranges

- Overall capability: 140°F to -166°F (60°C to -110°C) by request
- Standard calibration range: 68°F to -112°F (20°C to -80°C) with data to -166°F (-110°C)
- Ultralow calibration range: -58°F to -148°F (-50°C to -100°C) with data to -166°F (-110°C)

Accuracy

- $\pm 3.6^\circ\text{F}$ ($\pm 2^\circ\text{C}$) in range of 140°F to -85°F (60°C to -65°C)
- $\pm 5.4^\circ\text{F}$ ($\pm 3^\circ\text{C}$) in range of -86°F to -166°F (-66°C to 110°C)

Repeatability

- $\pm 0.9^\circ\text{F}$ ($\pm 0.5^\circ\text{C}$) in range of 140°F to -85°F (60°C to -65°C)
- $\pm 1.8^\circ\text{F}$ ($\pm 1.0^\circ\text{C}$) in range of -86°F to -166°F (-66°C to -110°C)

Temperature

- Operating: -166°F to 158°F (-110°C to 70°C)
- Storage: Maximum 158°F (70°C)

Operating Pressure (Dependent on Mount)

- Flange process connection (M1):
5 :Hg to 75 psig (6 bar)
- Threaded process connection (M2):
5 :Hg to 5000 psig (345 bar)

Flow Range

- Gases: Static to 10,000 cm/s linear velocity at 1 atm
- Liquids: Static to 10 cm/s linear velocity at density of 1 g/cc

Response Time

Less than five seconds for 63% step change in moisture content in either wet-up or dry-down cycle

Consult factory for specifications of other moisture probes available for special applications.

Input Voltage

1 VAC, 77 Hz

Impedance Range

50 kS to 2 MS depending on water vapor

Limited Warranty

- Calibration: Six months from delivery
- Materials and workmanship: One year from delivery

Optional Temperature Sensor

Type

Nonlinear negative temperature coefficient (NTC) thermistor (resultant temperature linearized by microprocessor)

Operating Range

-22°F to 158°F (-30°C to 70°C)

Accuracy

$\pm 0.9^\circ\text{F}$ ($\pm 0.5^\circ\text{C}$) overall

Response Time (Maximum)

1 second in well-stirred oil or 10 seconds in still air for a 63% step change in increasing or decreasing temperature



www.gesensinginspection.com

920-046D