


# Rhythm<sup>®</sup> Multi-Monitor/ Mixed Monitor

Enhancing Rhythm Review Capabilities

## Flexibility in Information Display

The Rhythm Multi-Monitor/Mixed Monitor module allows Rhythm to run on more than one monitor, increasing the amount of space available for information display. You can also configure Rhythm to run on different types of monitors, having a mix of color depth (color and monochrome) and monitor resolution.

The Rhythm Multi-Monitor/Mixed Monitor module allows you to maximize the viewing real estate of high-resolution diagnostic displays by combining them with a lower resolution commercial monitor. Why use a significant portion of a high-resolution display for reading reports or viewing a work list? You can see the reports and the data selector on the color monitor while the high-resolution monitors can be used for images only. When combined with the powerful Rhythm work list and the possibility to change the work list while viewing images, the need to toggle back to the data selector screen is minimized. You can spend more time viewing images, and that directly translates to increased productivity.

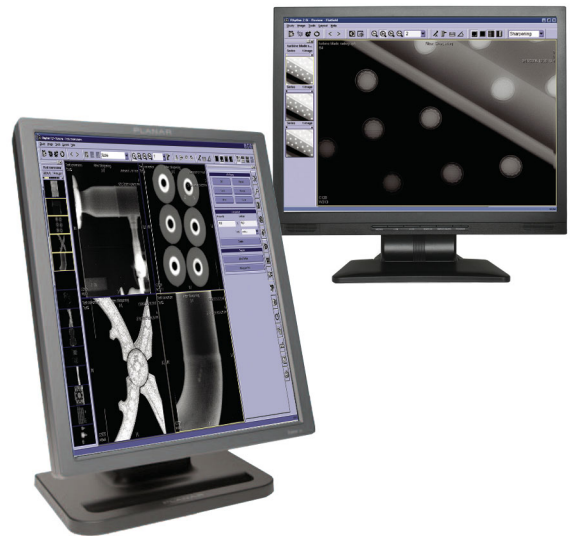


# Monitors

Rhythm workstations are offered with different monitors and associated video boards to meet a variety of image viewing needs. The following monitor types are available as a part of Rhythm turnkey solutions.


Model	Orientation	Color Depth	Resolution	Type	Size
Color	Landscape	Color	1280 x 1024	Flat Panel	19 Inches
3MP	Portrait	Monochrome	1536 x 2048	Flat Panel	21 Inches
5MP	Portrait	Monochrome	2048 x 2560	Flat Panel	21 Inches

## Monitor Configurations

The following monitor configurations are available in combination with Rhythm software to form a turnkey solution.

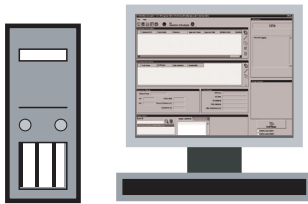

Color/lower resolution

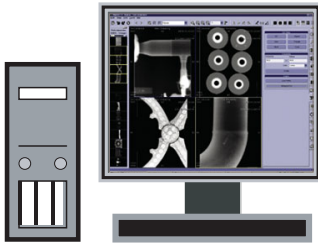

Monochrome/high resolution



Color and monochrome/high resolution

# Requirements

The Rhythm Multi-Monitor/Mixed-Monitor module can be added as an option to the Rhythm workstation.

## Language Support

The Rhythm Multi-Monitor/Mixed-Monitor module is available in the following languages:

- English
- French
- German
- Italian
- Spanish
- Chinese (Simplified)
- Japanese

## Warranty Information

The published company warranty in effect on the date of order shall apply. Software will be provided and warranted under the terms of a Software License Agreement. GE Inspection Technologies reserves the right to make changes to the applicable warranty.



### GE Inspection Technologies: productivity through inspection solutions

GE Inspection Technologies provides technology-driven inspection solutions that deliver productivity, quality and safety. We design, manufacture and service ultrasonic, remote visual, radiographic and eddy current equipment and systems. We offer specialized solutions that will help you improve productivity in your applications in the aerospace, power generation, oil & gas, automotive or metals industries.

[www.ge.com/inspectiontechnologies](http://www.ge.com/inspectiontechnologies)